


0.084-230.0 B 85 R classic



General notes

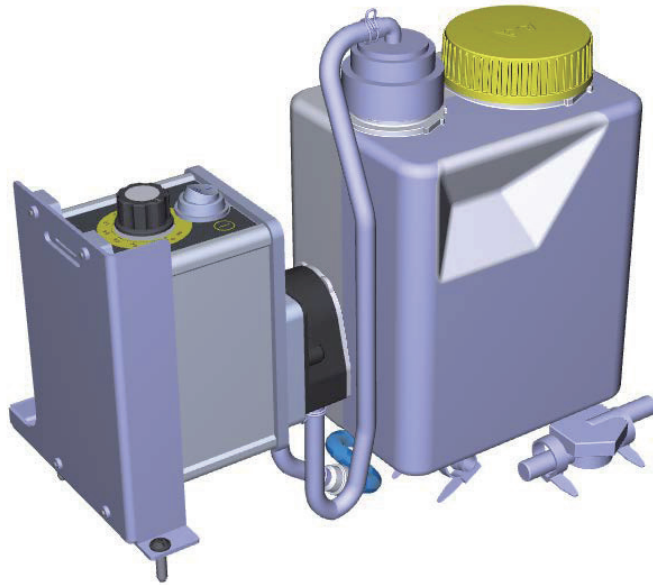

Read and adhere to these installation instructions before installation.

Keep these installation instructions for future use and for future owners.

Description

These installation instructions describe the installation and connecting up of the detergent dosing device RM DOSE in the machine B 85 R.

Safety instructions

Hazard levels

⚠ DANGER

- Indication of an imminent threat of danger that will lead to severe injuries or even death.

⚠ WARNING

- Indication of a potentially dangerous situation that may lead to severe injuries or even death.

⚠ CAUTION

- Indication of a potentially dangerous situation that may lead to minor injuries.

ATTENTION

- Indication of a potentially dangerous situation that may lead to damage to property.

Safety instructions

ATTENTION

Risk of damage due to improper installation.

Improper installation or connecting up of the attachment can damage the attachment as well as the vehicle or the machine. Malfunctions and failures can occur on the attachment and the vehicle or machine.

Have the assembly, installation and connecting up of the attachment carried out only by a qualified specialist.

ATTENTION

Risk of damage due to electrostatic discharge (ESD)!

Electrostatic discharge (ESD) can damage electronic components.

Take suitable measures to discharge the electrostatic charge before all work on the device electronics.

ATTENTION

Risk of damage due to sharp-edged objects and soiling!

Sharp-edged or dirty objects can cause damage such as scratches, notches and deformation when coming into contact with device components. Dirty tools, cloths and work surfaces can cause irreversible soiling and discolouration.

Use only suitable, undamaged and clean tools and auxiliary materials and exercise care when working. Place components and devices only on clean, padded surfaces.

For safety and warranty reasons, we recommend that you have Kärcher Service perform the assembly, installation and connection.

Keep these installation instructions for future reference or for future owners.

Note


Also adhere to the operating instructions for the vehicle or device in which the attachment is installed.

Order numbers and spare parts

You can find all order numbers and spare parts in DISIS.

Overview

The attachment kit consists of the following parts:

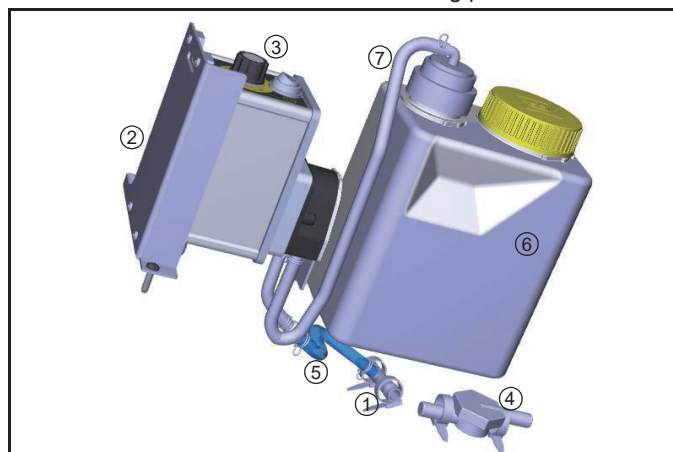

- ① Cable tie with clip
- ② Dosing pump holder
- ③ Dosing pump
- ④ Flowmeter
- ⑤ Detergent outlet
- ⑥ Detergent container
- ⑦ Detergent inlet

Preparatory work

- Turn off the scrubber.
- Pull out the key.
- Disconnect the battery plug.

Installation

Preparation for installation

⚠ CAUTION


Material damage through incorrect installation
Allow only qualified staff to perform the installation.

1. Place the device on a level surface.
2. Switch off the device.

Note

After installation, keep the installation instructions and the circuit diagram together with the operating instructions.

Wiring diagram

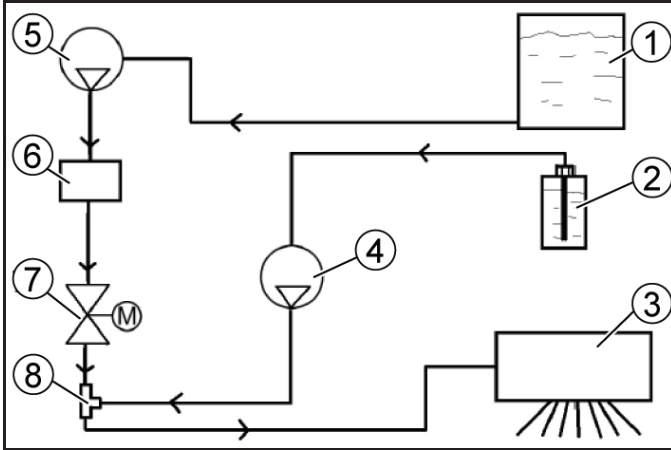

- ① Fresh water tank
- ② Detergent container with suction lance
- ③ Cleaning head
- ④ Detergent dosing pump
- ⑤ Water pump
- ⑥ Flowmeter
- ⑦ Electric ball tap
- ⑧ T-piece

Detergent dosing pump and flowmeter

1. Tilt the waste water tank and remove batteries.




2. Close the ball valve.



3. Remove the brush deck.
4. Cut the hose to the cleaning head after ball valve.
5. Fasten the flowmeter from below.
6. Insert T-piece into the hose and secure it with clips.

Note


Lay the machine down on its side for more operating space.
The final installation result is shown in the figure below.

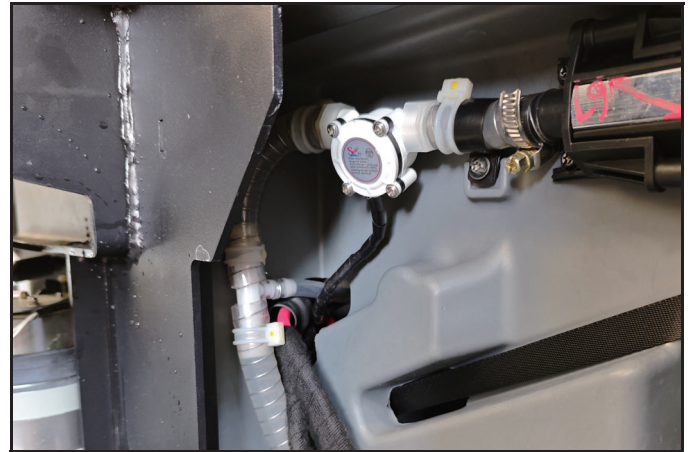

7. Mount the detergent dosing pump in the battery compartment.




8. Screw fasten the frame of the detergent container.

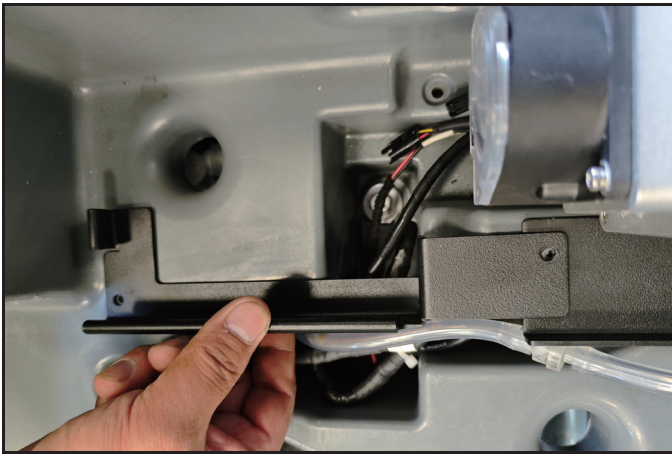


9. Route the wiring harness and hose from the bottom of the machine into the battery compartment.

10. Connect the 2-pin and 3-pin cables, and attach the hoses to the liquid outlet of the pump.

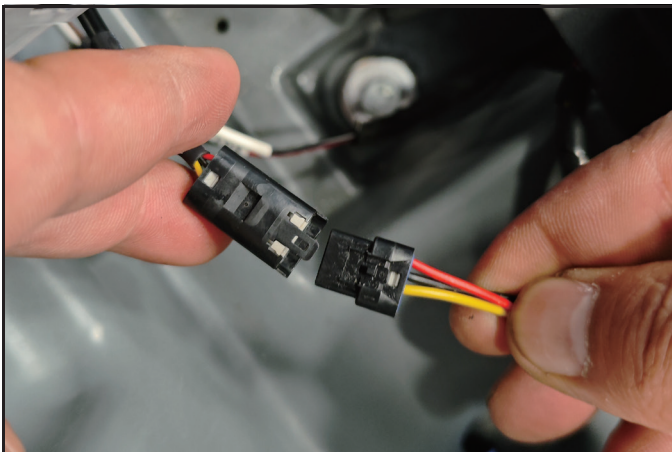

11. Connect the hose of the detergent container to the inlet port of the dosing pump.

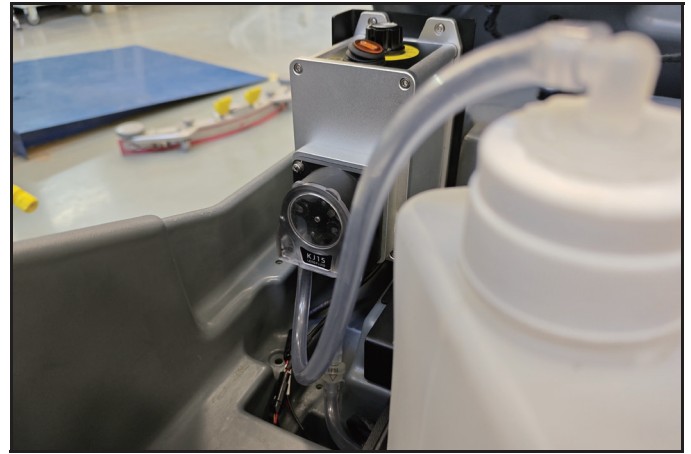

12. Place the detergent container on the tray.



Activating the attachment kit

Note

Assemble batteries before activate.

1. Turn on the power switch on the detergent pump.



Function test

1. Connect the battery.
2. Switch the device on.
3. Switch on the cleaning mode.
4. Check if the RM pump is working



THANK YOU!

MERCI! DANKE! ¡GRACIAS!



Registrieren Sie Ihr Produkt und profitieren Sie von vielen Vorteilen.

Register your product and benefit from many advantages.

Enregistrez votre produit et bénéficiez de nombreux avantages.

Registre su producto y aproveche de muchas ventajas.

www.kaercher.com/welcome




Bewerten Sie Ihr Produkt und sagen Sie uns Ihre Meinung.

Rate your product and tell us your opinion.

Évaluer votre produit et dites-nous votre opinion.

Reseñe su producto y díganos su opinión.

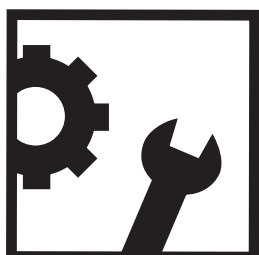

www.kaercher.com/dealersearch

Alfred Kärcher SE & Co. KG

Alfred-Kärcher-Str. 28-40

71364 Winnenden (Germany)

